

# INSTRUCTION GUIDE

## Key Pad Entry Alarm – HS4317D

### ENCLOSED YOU WILL FIND:

- Key Pad Entry Alarm
- Magnet
- Double-sided tape
- Optional screws

### TOOLS NEEDED:

- Small Phillips head screwdriver

### BATTERIES NEEDED (not included):

- Three "AAA" alkaline batteries

### INSTALLATION

For indoor use only. You must mount the alarm and magnet so the magnet rests with its arrow pointing toward one of the alarm's markings for proper alignment. Choose a location that lets you install the magnet on a door or window and the alarm next to it on the frame or vice versa. The distance between the alarm and the magnet must be no more than 5/16 inch. Use the supplied screws or the supplied adhesive tape and follow these steps to mount the alarm and magnet.

1. Remove the screw on the bottom of the alarm and remove the back cover.
2. Use two screws or two of the pieces of supplied adhesive tape to mount the back cover. If using tape, make sure mounting surfaces are free of dust, oil and other substances that could affect adhesion.
3. Install 3 "AAA" alkaline batteries onto appropriate terminals.
4. Slide the alarm onto the back cover.
5. Replace the screw on the bottom of the alarm.
6. Use the two remaining screws or the other piece of the supplied adhesive tape to mount the magnet so the arrow points toward one of the markings on either side of the alarm.

### SETTING THE SECURITY CODE

You can set your own four-digit alarm security code.

- Your alarm's security code is preset to 1234 at the factory. Be sure you use a different security code.
- You must enter all four numbers within 10 seconds, or the red indicator turns off and the alarm exits the procedure and resets to the previous security code.
- If you remove the battery, the security code resets to 1234.

Follow these steps to set your own security code.

1. Press keys 3 and 4 at the same time. The red indicator lights.
2. Enter the current security code. The yellow indicator flashes.  
**Note:** If this is the first time you are setting the code, enter 1234.
3. Enter the desired four-digit code. The yellow indicator will flash once and a short beep will sound to indicate a security code change.

### ARMING/DISARMING

When the unit is powered up, two beeps will sound and then the unit will be in the off mode. The unit can be turned on by pressing the keys 1 and 2 at the same time. A beep will sound indicating the unit is armed. The unit can be turned off by pressing the keys 1 and 2 at the same time. Two beeps will sound indicating the unit is disarmed. To change between chime and alarm mode, the unit has to be turned off first and set to the desired mode. Then turn on the unit.

#### 1. Chime Mode

Simply set the mode switch to "chime" and turn on the unit. The electronic chimes sound when someone opens the door. If not, readjust the position of the magnet.

#### 2. Alarm Mode

Set the alarm's mode switch to "instant" or "delay" and turn on the unit. Then close the door. A beep will sound to indicate the unit is armed.

**Note:** If you don't close the door within about 30 seconds, a continuous beeping sound will alert you that the door is not closed. You can only turn off the beeping sound by closing the door.

The alarm sounds when someone opens the door. In delay mode, you will have about 10 seconds to enter the security code before the alarm sounds. In instant mode, the alarm will sound instantly for about 60 seconds or until you enter the security code.

**Note:** After about 60 seconds, the alarm automatically shuts off and is armed again. The green indicator will flash to indicate there was an intrusion.

**Note:** You cannot silence the alarm by pressing the keys 1 and 2 at the same time. You must enter the security code or wait about 60 seconds for the alarm to stop sounding.

### **BATTERY REPLACEMENT**

If one of the following conditions occurs, replace the batteries:

- The red LED flashes and a short beep sounds every 20 seconds
- The chimes' or alarm's sound becomes weak
- The alarm does not work at all when the door opens

**Note:** For longer battery life, use alkaline batteries. If the alarm does not respond after you replace the battery, remove the battery and reinstall it. Each time you remove the battery, the security code resets to 1234.

### **LIMITED WARRANTY**

The product you have purchased is guaranteed against defects in workmanship and materials for the period stated on the package. Warranties implied by law are subject to the same time period limitation. Some states do not allow limitations on how long an implied warranty lasts, so this time limitation may not apply to you.

If the product fails due to a manufacturing defect during normal use, return the product and dated sales receipt to the store where purchased for replacement OR send the product and the dated sales receipt to:

**Lamson & Sessions**  
**Attn: LHP Customer Service**  
**25701 Science Park Drive**  
**Cleveland, OH 44122 USA**

**Not Covered** - Batteries, light bulbs, and other expendable items are not covered by this warranty. Repair service, adjustment and calibration due to misuse, abuse or negligence are not covered by this warranty. Unauthorized service or modification of the product or of any furnished components will void this warranty in its entirety. This warranty does not include reimbursement for inconvenience, installation, set-up time, loss of use, postage, unauthorized service, or other products used in conjunction with, but are not supplied by, Lamson & Sessions.

All requests for replacement must include a **dated sales receipt** (copies accepted). LAMSON & SESSIONS IS NOT LIABLE FOR LOST PROFITS, INDIRECT, SPECIAL, EXEMPLARY, INCIDENTAL OR CONSEQUENTIAL DAMAGES INCLUDING WITHOUT LIMITATION ANY SUCH DAMAGES DUE TO IMPROPER WIRING OR MISUSE OF THE PRODUCT. As some states do not allow the exclusion or limitation of incidental or consequential damages, the above limitation and exclusion may not apply to you.

### **ALSO AVAILABLE FROM CARLON:**

- Extend-A-Chime® – lets you hear your existing wired doorbell in remote areas of your home or yard
- Plug-in and Battery Doorbells and Chimes
- On/Off Remote Switches
- Touch and Automatic Lighting Controls

**This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.**

# **Carlton®**

25701 Science Park Drive  
Cleveland, Ohio 44122  
www.lamson-sessions.com

Made in China  
©2007 LAMSON & SESSIONS

071024 IS137