


21X14.5CM

OPERATION INSTRUCTION:

1. Unscrew the ornament cap to access the LED module and battery compartment. The module is connected to the cap.
2. Insert 3 x AA batteries (not included) into the battery compartment. Align “+” and “-” as marked near the edges of the battery compartment. **Caution:** Remove batteries when not in use.
3. The product is ready to operate once the batteries are installed. In nighttime conditions, the LED will automatically light up and remain lit for 8 hours; in daylight conditions the LED will not turn on. This product is equipped with a light sensor which controls the on/off function so there is no need to turn this product “on” or “off”. Installing the batteries is the only action required to operate this product.
4. Screw the cap and LED module back on tightly and hang from a suitable location away from continuous ambient light at night with access to natural direct sunlight during the day. The sensor will not be affected by temporary bright light.
5. At night enjoy the glowing and gently pulsing light!

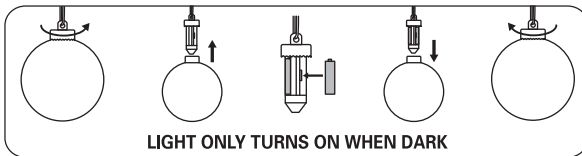

WARNING: THIS IS NOT A TOY AND IS NOT INTENDED FOR USE BY CHILDREN, ADULT USE ONLY. OUTDOOR USE ONLY.

Xodus Innovations 2025 Yore Avenue, Benton Harbor MI 49022 www.xodusinnovations.com

Your **OUTDOOR ILLUMINATED LED ORNAMENT** has been designed to provide many seasons of trouble-free operation. In the event that a problem does occur, please refer to the following suggested solutions.

PROBLEM: NO LIGHT

LIKELY CAUSES	SOLUTION
Item is indoors.	Relocate the item to an outdoor location and wait for darkness.
Batteries not inserted correctly.	Make sure to align the “+” and “-” as marked near the edge of the battery compartment. Place in the dark to test.
Batteries exhausted.	Change batteries. Place outdoors and wait for darkness.
Ornament has been placed in a location that does not get bright enough during the day.	Change to a location where there is brighter daylight during the daytime. Daylight is needed to reset the 8-hour timer each day.
Item subjected to sustained bright light.	Product has reset and will activate again when dark.
Ornament has been placed in a location where there is too much ambient light at night.	Change to a darker location. Nearby lights could keep the ornament from operating properly.

PROBLEM: LIGHT STAYS ON

LIKELY CAUSES	SOLUTION
Light sensor has activated the light and has not been turned off by daylight.	Take Outdoors. The light will turn off if daytime and will turn on again at dusk.